 




MZ-509 无线音箱

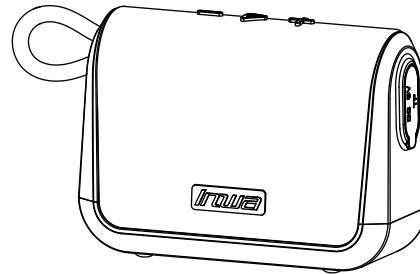

 
使用说明书

感谢您购买本产品。使用蓝牙音箱前，请阅读所有安全信息和操作说明。

安全须知

- 阅读所有说明，并保存起来以备日后参考。
- 请勿将其放置在热源附近。避免使用散热器，火炉和其他会发热的设备。避免长期暴露在阳光和高温下。
- 此音箱有2种模式：蓝牙模式和TF卡模式。
- 请注意：当蓝牙断开10分钟后，音箱将进入休眠关机。要重新启动音箱，请按电源开关/播放暂停/模式按钮。


包装内容

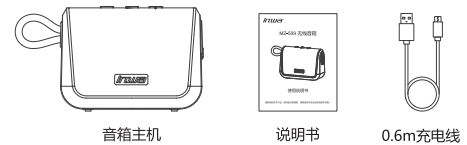

产品参数

- 工作时长：60%音量连续工作12hr
- 待机时长：≥300hr
- 蓝牙范围：≤10m
- 频率响应：20Hz-20KHz
- 蓝牙版本：V5.1
- 充电时长：2-4hr
- 工作电压：5V/1A
- 额定功率：8W
- 防水等级：IP67
- 电池容量：1800mAh

 产品描述

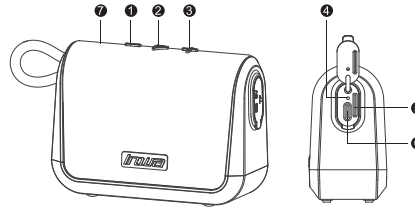

- ① —：降低音量/上一曲：长按按钮音量减。短按按钮上一首（蓝牙模式和TF卡模式下有效），双击为蓝牙强制配对。
- ② ▷：电源开关/播放暂停/模式：长按2秒为开机；单击为播放与暂停；在蓝牙连接状态或TF卡模式下，双击为蓝牙与TF卡模式切换。
- ③ ⊕：增加音量/下一曲：长按按钮音量加。短按按钮下一首（蓝牙模式和TF卡模式下有效），双击为TWS组队模式。
- ④ 电源/充电指示灯（蓝/红灯）
- ⑤ SD卡接口
- ⑥ 电源接口：DC 5V 1A
- ⑦ 麦克风

 
操作指令

- 步骤1
长按电源按钮“▷”2秒，有开机提示音，进入蓝牙模式，蓝色指示灯进入闪烁状态，音箱进入与手机蓝牙搜索配对状态。



注意：
在蓝牙播放时插入TF卡则自动切换到TF卡播放模式。

- 步骤2
打开手机或其他蓝牙设备上的蓝牙功能，然后搜索名为MZ-509的音箱。与音箱连接。
- 1.在手机上搜索MZ-509音箱；
2.连接MZ-509音箱；
3.选择通过MZ-509音箱播放音乐。

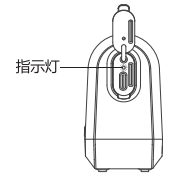

- 步骤3
配对成功后，会有提示音，蓝色指示灯将长亮。
- 步骤4
在手机上播放音乐。播放音乐时，蓝色指示灯将慢闪，音乐暂停时，蓝色指示灯将长亮。

- 步骤5
如何将音箱与新设备连接：
将音箱与设备连接时，您可以双击音量减按钮“—”切断当前连接并进入配对状态。然后，蓝色指示灯将快闪，音箱就可以与新设备连接，蓝牙状态开机自动回连上次连接的设备，无连接10分钟关机。



蓝牙音箱连接记忆功能

- 如果设备蓝牙功能开启，打开音箱后，音箱将自动连接到最后一个配对设备。

 
TF卡模式

- 插入TF卡后，音箱将进入TF卡模式，您可以双击电源按钮“▷”进行模式切换。
- 在TF卡模式下，当播放音乐时，蓝色指示灯将慢闪，音乐暂停时，蓝色指示灯将长亮。



蓝牙音箱通话功能

- 接听电话：当音箱与手机连接时，如果有来电，您可以短按播放暂停按钮“▷”即可接听。
- 挂断电话：当音箱与手机连接时，通话中您可以短按播放暂停按钮“▷”即可挂断。
- 拒绝通话：当音箱与手机连接时，来电时您可以长按播放暂停按钮“▷”拒绝来电。



TWS

TWS的连接方式：
同时打开两台音箱，双击其中一台的音量加按钮“⊕”后发出“咚”进行TWS组队，当听到另一台音箱发出“咚”一声后表示组队成功并且蓝灯长亮为从机模式，然后再将另一台音箱与蓝牙设备连接播放音乐，下次开启音箱将会自动连接。

充电提示

- 低电量时，音箱会发出提示音报警，您需为音箱进行充电。
- 充电时，红色指示灯常亮，充满电后红色指示灯熄灭。
- 建议对带锂电池产品如不使用时每三个月充一次电。

注意事项

- 请阅读本说明并遵循本说明。
- 请在常温环境中存放和使用本产品。
- 请勿在近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器(包括放大器)。
- 请勿堵塞音箱的开口处，勿将物体塞入音箱的通风口或槽隙中。
- 请勿丢弃，避免因跌落造成本产品损坏。
- 请使用音箱额定电压的电源充电器充电。
- 如果连接线与您的设备不匹配，请与销售商联系。
- 请将音箱调至合适音量，避免对您的听力造成损害。
- 无论设备因何原因损坏，都必须及时请专业维修人员修理，擅自拆卸将使保修失效。
- 如果电池更换不当会有爆炸危险，只能用同样类型或等效类型的电池来更换。
- 电池(电池包或者组合电池)不得暴露在诸如日照、火烤或类似过热环境中的警告。

保修卡

产品型号	购买日期
经销商	用户姓名
联系电话	电子邮件
用户地址	

保修记录


用户姓名	故障描述	维修日期	维修人员签字

合格证

日期：_____
检验员：_____

Inwa®

 MZ-509 Wireless Speaker

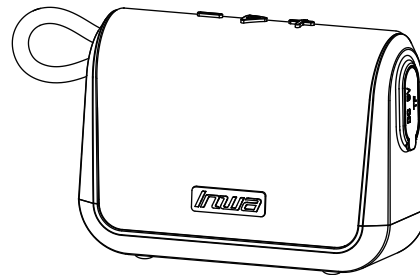


User's Manual

Thank you for purchasing this product. Please read all safety information and operating instructions before using the Bluetooth speaker.

Safety Instructions

- Read all instructions and save them for future reference.
- Do not place it near heat sources. Avoid radiators, stoves, and other appliances that generate heat. Avoid prolonged exposure to sunlight and high temperatures.
- This speaker has 2 modes: Bluetooth mode and TF card mode.
- Please note: When the bluetooth is disconnected for 10 minutes, the speaker will go to sleep and shut down. To restart the speaker, press the power switch/play pause/mode button.

 
Package Contents

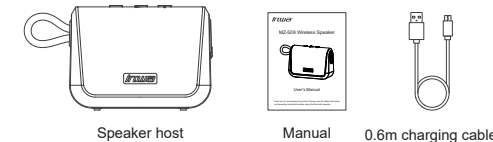

Product Parameters

- Working time: 60% volume continuous work for 12hr
- Standby time: ≥300hr
- Bluetooth range: ≤10m
- Frequency response: 20HZ-20KHZ
- Bluetooth version: V5.1
- Charging time: 2-4hr
- Working voltage: 5V/1A
- Rated power: 8W
- Waterproof grade: IP67
- Battery capacity: 1800mAh
- Product Weight: 192g(with battery)

 Product Description

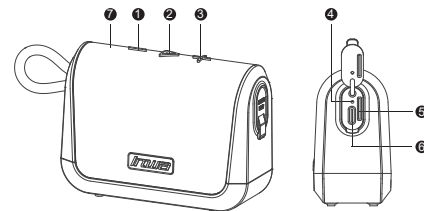

- ① : Volume down/Previous song: Long press the volume down button. Short press the button to play a song (effective in Bluetooth mode and TF card mode), double-click to force pairing for Bluetooth.
- ② : Power switch/play pause/mode: long press for 2 seconds to switch the machine; single click to play and pause; in bluetooth connection state or TF card mode, double click to switch between Bluetooth and TF card mode.
- ③ : Volume up/Next track: Long press the volume up button. Short press the button for the next song (valid in Bluetooth mode and TF card mode), double-click for TWS team mode.

④ Power/charging indicator (blue/red)

⑤ SD card interface ⑥ Power interface: DC 5V 1A

⑦ Microphone

 
Operation Instructions

- Step 1
Press and hold the power button "



Notice:
Inserting a TF card during Bluetooth playback will automatically switch to the TF card playback mode.


- Step 2
Turn on the Bluetooth function on your phone or other Bluetooth device and search for the speaker named MZ-509. Connect to speakers.
 1. Search for MZ-509 speakers on your phone;
 2. Connect MZ-509 speakers;
 3. Choose to play music through MZ-509 speakers.

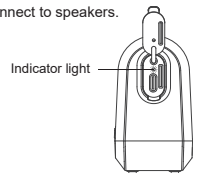

- Step 3
After the pairing is successful, there will be a beep and the blue indicator light will be on for a long time.

- Step 4
Play music on your phone. When playing music, the blue light will flash slowly, and when the music is paused, the blue light will be on.

 - Step 5
How to connect the speakers to the new device:
When connecting the speaker to the device, you can double-click the volume down button "



Bluetooth Speaker Connection Memory Function

- If the device's Bluetooth function is turned on, after turning on the speaker, the speaker will automatically connect to the last paired device.

Bluetooth Speaker Call Function

- Answer the call: When the speaker is connected to the mobile phone, if there is an incoming call, you can short press the play pause button "- Hang up the call: When the speaker is connected to the mobile phone, you can short press the play pause button "- Reject the call: When the speaker is connected to the mobile phone, you can long press the play pause button "



Tf Card Mode

- After inserting the TF card, the speaker will enter the TF card mode, you can double-click the power button "- In TF card mode, when playing music, the blue indicator light will flash slowly, and when the music is paused, the blue indicator light will be on for a long time.



TWS

TWS connection method:
Turn on two speakers at the same time, double-click the volume plus button "

Charging Tips

- When the battery is low, the speaker will sound an alarm, and you need to charge the speaker.
- When charging, the red indicator light is always on, and the red indicator light is off when fully charged.
- It is recommended to charge the product with lithium battery once every three months if not in use.

UK	REP	GOAL REACH CONSULTING LTD OFFICE 1029 3 HARDMAN STREET 10TH FLOOR, SPINNINGFIELDS MANCHESTER, UK M3 3HF
----	-----	--

OST UK 20230424000006 goalservice@hotmail.com

We simply act as UK representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.

EU	REP	SUCCESS COURIER SL CALLE RIO TORMES NUM.1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada, Madrid,28947 Spain
----	-----	---

OST_EU_20230424000022 successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.